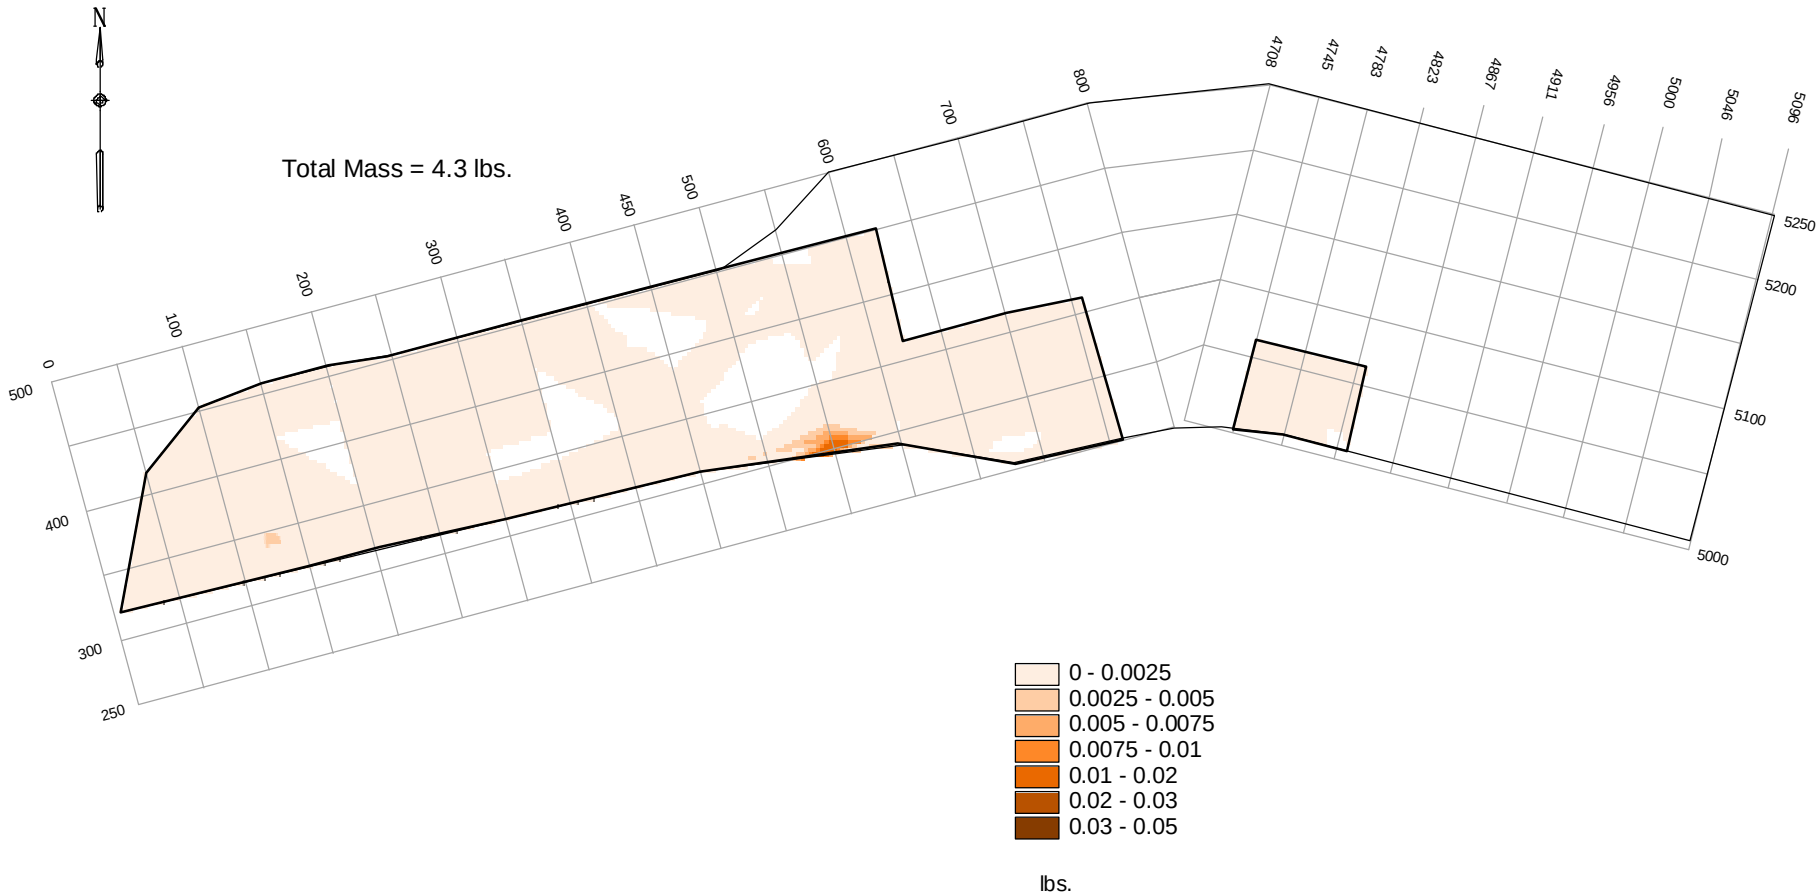

PCB mass calculated as (Thickness x Concentration x Density) / 1x10^6
Where: Thickness = sediment thickness (yds.)
Concentration = PCB concentration (ppm)
Density = sediment density (lbs./cu. yd.)

**IDW contouring method used with search radius of 200 ft. and power of 5.

50 0 50 100 Feet

Deposit N		
FIGURE F18 PCB Mass* - Phase I (Postdredge) IDW**		
Scale: AS SHOWN	Date: April, 2000	
Prepared By: Foth & Van Dyke	By: SGL	97w027

m:\97w027\apr\depnpcb.apr Layout 16